

KONICA MINOLTA

Printed on a
AccurioPress C140105

Embellished on a
AccurioShine 3600



DOUBLE THE IMPACT

A smarter, integrated solution for
high-volume print and premium
embellishment—designed to differentiate.


Giving Shape to Ideas

THE FUTURE IS DIGITAL PRINTING

Imagine being able to produce more effective materials that keep you ahead of the market and in tune with society. Now you can. Konica Minolta's AccurioPress series and AccurioShine 3600 enable you to deliver high-value-added, market-effective printed materials while minimizing waste and environmental impact, all necessary to achieve sustainable growth in the printing industry. This winning combination also offers professional-quality and bespoke embellishment capabilities as well as increasing job throughput. From commercial printers to in-house print rooms, believe in our digital solutions to maximize your business.




AccurioPress
C4080

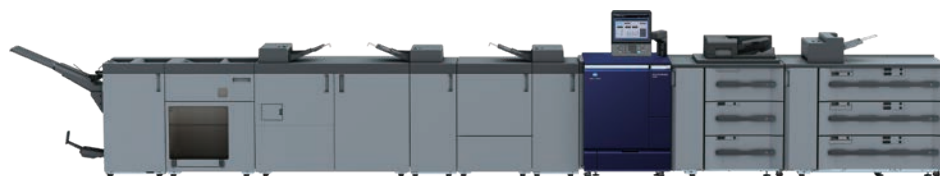

AccurioPress
C7100e



AccurioPress
C14010S

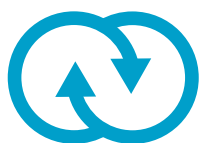

AccurioShine
3600 iFoilOne



WE UNDERSTAND YOUR NEEDS



BRANDS

"I want to print only what I need, only when I need it, but I demand high quality and cost performance. My materials need to be dynamic and appealing to sell my products."


HIGH-QUALITY, VERSIONED PRINTING

FAST DELIVERY TIME

EXCELLENT COST PERFORMANCE

IMPACTFUL DESIGN

ABILITY TO ATTRACT NEW CUSTOMERS

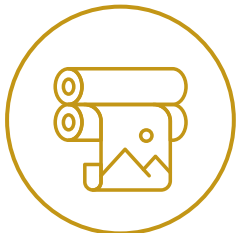

PRINTING COMPANIES

"Rising material costs are crippling our business, not to mention the challenge of finding skilled operators. Without digital, small-lot capabilities, we are unable to attract new customers."

DIGITAL, SMALL-LOT CAPABILITIES

FAST TURNAROUND AND SETUP TIMES

STREAMLINED, AUTOMATED WORKFLOW

OPERATOR FRIENDLY SYSTEM

DIFFERENTIATION WITH EMBELLISHMENT



ENVIRONMENTAL TRENDS

The market is changing fast and demanding your business keeps up. Rising energy and material costs reduce profitability, while your approach to ESG is in the spotlight.

CREATE VALUE THROUGH ESG STRATEGY

ELIMINATE MASSIVE PRINT WASTE

INCREASE EFFICIENCY TO REDUCE WASTE

DECREASE CO₂ OUTPUT

EMPOWER EMPLOYEES AND CUSTOMERS

10 REASONS TO SYNERGIZE



QUICK SETUP

Accurio**Press**

Go straight to print without needing to make plates

Accurio**Shine** 3600 iFoil**One**

Varnish and hot-foil directly from print data



LONGER UPTIME

Accurio**Press**

Real-time inspection technology automatically reprints and replaces misprinted sheets

Accurio**Shine** 3600 iFoil**One**

One varnish formula supports all jobs without the need to switch



ENHANCED EFFICIENCY

Accurio**Press**

Eliminate offline finishing with TU-510e inline four-edge trimmer

Accurio**Shine** 3600 iFoil**One**

Spot Varnish Editor ends the need to return to prepress



HIGH PRODUCTIVITY

Accurio**Press**

High-speed output of 140 and 80 ppm (A4/A3) on the AccurioPress C14010S

Accurio**Shine** 3600 iFoil**One**

Embellish up to 2,077 A3 sheets per hour with varnish thickness of 21 µm



UNRIVALED RELIABILITY

Accurio**Press**

Advanced reliability with real-time colour and registration correction

Accurio**Shine** 3600 iFoil**One**

On-the-fly registration with the Artificial Intelligence SmartScanner



SIMPLIFIED OPERATION

Accurio**Press**

IQ-501 / IQ-601 minimises manual interaction, ensuring colour consistency and registration accuracy

Accurio**Shine** 3600 iFoil**One**

Intuitive interface simplifies adjustment of varnish and hot-foil settings



QUALITY IMAGING

AccurioPress

High-resolution, 2,400 x 3,600 equiv. dpi x 8-bit image quality

AccurioShine 3600 iFoilOne

Create exciting visuals using iFOIL and 3D effects



MEDIA COMPATIBILITY

AccurioPress

Compatibility with heavier weight paper, embossed paper and banner paper up to 51" in length

AccurioShine 3600 iFoilOne

The Corona Treatment System enables greater media and substrate compatibility



AUTOMATED OPERATION

AccurioPress

Automatic media detection thanks to the Intelligent Media Sensors

AccurioShine 3600 iFoilOne

Automated job cost calculator forecasts varnish consumption and costs before production starts



ENVIRONMENTALLY GENTLE

AccurioPress

On-the-fly, print-quality adjustment to reduce waste

AccurioShine 3600 iFoilOne

Eco-friendly LED drying for an ozone-free environment

AccurioPress

C14010S



S.E.A.D. X 2,400 x 3,600 equiv. dpi x 8-bit image quality comparable to offset printing

Compatible with media up to 450 g/m² as well as envelopes and embossed paper

High-speed output realised. A4 at 140 ppm, A3 at 80 ppm

Intelligent Media Sensors IM-104/IM-105/IM-101 identifies type, weight, thickness and surface of substrates

5th Colour with white toner printing available, alongside traditional 4 Colour models

Your choice of Fiery, Creo, or our own Konica Minolta Controller

Automated engine linearisation and duplex position registration

Create full-bleed banners and much more with optional inline trimming unit

Intelligent Quality Optimizer IQ-601 detects errors and reprints, even with VDP

Optional inline cutting, folding, punching, and booklet making

AccurioPro Flux PROFESSIONAL PRINT SOFTWARE SOLUTION

TAKE CONTROL

AccurioPro Flux simplifies complex print jobs. General imposition tools handle setting up layouts, scaling, rotating & cropping artwork, and even re-pagination. Includes a one-click feature for automatic page layout optimization.

EFFICIENT OVERSIGHT

Assists entry-level operators to manage printers and oversee the whole print process, from imposition to printing and finishing, all in one go, simplifying the process and improving turnaround times even for complex projects.

AUTOMATED FUNCTIONS

With AccurioShine 3600 and AccurioPress digital printer working together, AccurioPro Flux facilitates the production of embellished print products. Spot colour layers for varnish or foil can be detected automatically and exported for a seamless post-print workflow.

AccurioShine

3600 iFoilOne



Designed for production-print workflows

The iFoil One system provides fully integrated, optional inline hot foil stamping.

Impressively small footprint

Innovative software suite and intuitive operation

High-capacity paper feed

AIS SmartScanner enables on-the-fly skew, shift, contraction and stretch adjustment

Exclusive inkjet technology with Konica Minolta's piezoelectric print heads

Inline Corona Treatment System

Optimized one-formula varnish for thicknesses from 21 to 116 μm

Optional VDP barcode scanner available




Printed on an
Accurio*Press* C14010S

Embellished on an
Accurio*Shine* 3600
iFoil*One*



See it in Action!

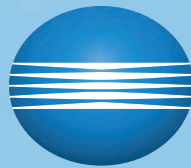

KONICA MINOLTA

© 2025 KONICA MINOLTA BUSINESS SOLUTIONS U.S.A., INC. All rights reserved. Reproduction in whole or in part without written permission is prohibited. KONICA MINOLTA and the KONICA MINOLTA logo are registered trademarks or trademarks of KONICA MINOLTA, INC. All other product and brand names are trademarks or registered trademarks of their respective companies or organizations. All features and functions described here may not be available on some products. Design & specifications are subject to change without notice.