



KONICA MINOLTA

DISCOVER YOUR PRINTING POSSIBILITIES

Konica Minolta's One i-Series
of multifunctional printers (MFPs)



bizhub 751i

- Multifunction black & white laser printer
- Print, copy, scan & fax
- Designed for high-volume office operations



Konica Minolta Business Solutions U.S.A., Inc.
2025 A3 Line of the Year Award

Giving Shape to Ideas



INTUITIVE
OPERABILITY



MOBILE
CONNECTIVITY



SECURITY



APPLICATION ECOSYSTEM



PRODUCTIVITY



SUSTAINABILITY

ELEVATE YOUR BUSINESS OPERATIONS

Step into the future with a new generation of MFPs for high volume office operations. A true business assistant, the Konica Minolta's 751i MFP can help your organization tighten security, boost efficiency and advance fleet management—taking operations to a whole new level no matter your future office environment needs.

- Get reliable speed and performance from the robust One i-Series engine powered by a quad-core Central Processing Unit with 8 GB of memory and a 256 GB SSD (Solid State Drive)
- Leverage versatile MFP capabilities with full-speed media printing range and high-speed one-pass dual scanning at up to 280ipm, with digital skew correction, and large capacity trays
- Operate the bizhub like a smartphone or tablet with intuitive and fully customizable user interface
- Print anytime, from anywhere, with Konica Minolta's innovative mobile print support with Wi-Fi access
- Choose from 50-sheet or 100-sheet floor-standing staple finishers for high-speed versatile finishing convenience, with modular options for 80-page booklet making, tri-folding and post insertion; floor standing finishers also support manual stapling
- Seamlessly connect to your cloud-based document workflows with true cloud scan workflow automation
- Protect your business with secure network integration, self-encrypting SSD, advanced network user authentication and optional virus scan



bizhub 751i



BOOST PRODUCTIVITY WITH A SIMPLE INTERFACE

The consistent interface across all bizhub One i-Series devices gives you the look and feel of a modern tablet making it intuitive to navigate. New users benefit from an error-free settings process with a guided copy and scan program. Konica Minolta's MarketPlace User Interface building tool makes it easy to customize the interface to fit your users' unique needs.

- 10.1" tablet-like display with simple, sleek design
- Responsive vibration feedback
- 24-90° panel tilt angle for easy handling
- Card-style layout with easy access to settings
- Drag-and-drop tablet-style operation

SIMPLIFY FLEET MANAGEMENT WITH KONICA MINOLTA RMM

Let Konica Minolta handle your device fleet so you can focus on growing your business. Our Remote Monitoring & Management (RMM) platform keeps your devices secure, compliant, and performing at their best.

Key Benefits:

- Centralized Monitoring: Manage your entire fleet from one intuitive platform
- Built-In Security & Compliance: Stay aligned with organizational and industry standards
- Real-Time Alerts: Proactively address issues with instant status updates
- Easy Optimization: Push updates and settings with minimal effort
- Custom Dashboards: View, verify, and manage device activity at a glance

Stay efficient, secure, and in control—with Konica Minolta's Fleet RMM.

FUTURE-PROOF YOUR DOCUMENT WORKFLOWS

The Konica Minolta One i-Series of MFPs is built for the future, giving you a cloud-ready solution to tackle your business needs. Gone are the days of being tethered to on-premises MFP infrastructures and cumbersome IT tasks. With Konica Minolta's 751i MFP, you have an elegant, effortless solution to elevate efficient business operations for the modern world of work.

CONNECT TO YOUR CLOUD WORKFLOWS

Accelerate your digital transformation with the Konica Minolta cloud-enabled 751i MFP

- Handle typical workloads more efficiently by scanning and faxing diverse document sizes to multiple repositories
- Print confidential files directly on the MFP, ensuring documents are only released by the person who submitted the file
- Enhance communication and teamwork with this platform that supports large file storage, sharing and collaboration—within your company and with your external customers



PROACTIVELY PROTECT YOUR BUSINESS INFORMATION

In addition to layered security offerings, the bizhub 751i MFP comes equipped with:

- Standard 256 GB solid state drive (SSD)
- MFP user authentication
- Authentication attack detection
- Password hack detection

Optional Security Offerings

- HID Proximity & Smart Cards
- Mobile-based biometric authentication
- Virus scan to protect against malware and viruses
- Cloud-based security monitoring and management




EASY FOR ANYONE TO USE... DESIGNED WITH EVERYONE IN MIND



Konica Minolta MFPs use Universal Design principles to ensure anyone regardless of age, gender, stature or disability can use them with the same degree of ease.

- Color-coding and LED lamps make MFPs simple to use for visually-impaired individuals
- Easily accessible paper trays and toner cartridges for refilling, easy to lift automatic document feeder and soft-close hinges for silent closing
- Large 10.1" tablet touch panel with a 24° to 90° tilt angle and vibration feedback provide convenient operation for all users—whether standing or sitting
- Voice guidance option enlarges select screens and provides verbal guidance to explain key operations to help vision-impaired users carry out jobs and prevent incorrect functions from being carried out
- Dark-colored paper tray and translucent document feeder guides help people with poor vision identify paper easily
- Ribbed paper trays that can be identified by touch

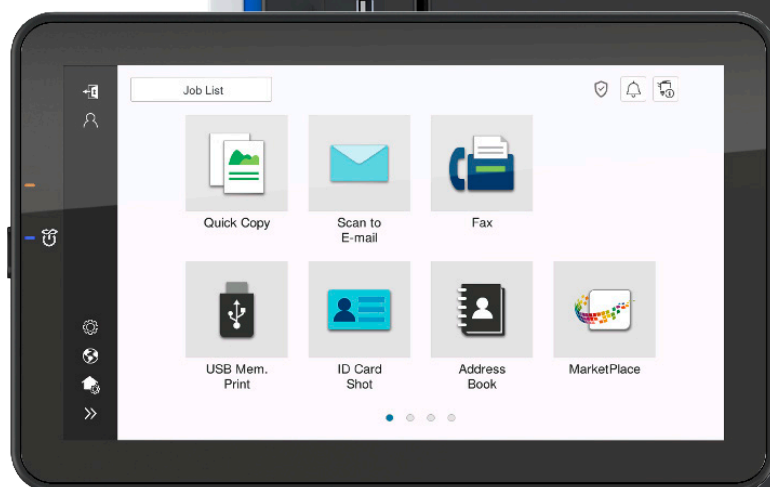

SUPPORT YOUR SUSTAINABILITY GOALS

Konica Minolta cares about the environment and our collective future. We have been honored with numerous national and global awards, including:

- Inclusion on the Dow Jones Sustainability Indexes for eight consecutive years
- Top rating from the Climate Performance Leadership for activities related to climate change
- 95 active products on the EPEAT registry, with 69 achieving gold status
- 14 products on the EPEAT registry with 21 optional points — the highest EPEAT point total of imaging equipment manufacturers



PARTNER WITH A LEADER IN ENVIRONMENTAL PROGRESS

Konica Minolta doesn't just talk about environmental goals, we take action. We developed a technology that blends polyethylene terephthalate (PET) plastic with Polycarbonate (PC) from water bottles to create a recycled material that can be used in the outer casing of MFPs—a first in the industry.

We are also a SmartWay partner with the U.S. Environmental Protection Agency (EPA), agreeing to reduce emissions and fuel use in logistics activities. In addition, Konica Minolta is a member of Two Sides, where we take the lead in environmentally conscious printing—educating communities about the importance of sustainable forestry and eco-friendly paper goods.



Konica Minolta Eco Vision 2050

Our environmental action plan centers on three goals:

- Reduce CO2 emissions throughout our product life cycle by 80 percent by 2050, compared to 2005 levels*
- Promote recycling and effective use of the Earth's limited resources
- Work to promote restoration and preservation of biodiversity

*Currently ahead of schedule and on track to reach carbon minus status by 2030



GET TO KNOW YOUR 751i



OPTIONS

1 ENHANCED FEATURES

- Voice guidance
LK-104-v3
- Barcode fonts
LK-106
- Unicode fonts
LK-107
- OCR A and B fonts
LK-108
- Document converter pack
LK-110-v2
- ThinPrint® client
LK-111
- Antivirus
LK-116

2 CONNECTIVITY

- Fax board
FK-514 x2
- Fax board
FK-515
- Mount kit
MK-742
- Wireless LAN
UK-221
- USB I/F kit
EK-608
- USB I/F kit
EK-609 OR
- ID card reader
AU-205H
- Mount kit
MK-735

3 OTHERS

- Working table
WT-506
- Upright panel
WT-519
- 10-Key pad
KP-102
- Security kit
SC-509
- 1 TB SSD
EM-908
- Keyboard holder
KH-102
- Keyboard
External keyboard
- Off-line stapler
FS-P04

4 MEDIA INPUT

- Intelligent media sensor
IM-103
- Large capacity tray
LU-303 OR
- Large capacity tray
LU-205
- Banner tray
MK-730

5 MEDIA OUTPUT

- Output tray
OT-514
- Staple finisher
FS-539 OR
- Relay unit
RU-519 OR
- Booklet finisher
FS-539SD OR
- Relay unit
RU-519
- Punch kit for FS-539/SD
PK-524
- Staple finisher
FS-540 OR
- Relay unit
RU-519 OR
- Booklet finisher
FS-540SD OR
- Relay unit
RU-519
- Punch kit for FS-540/SD
PK-526
- Post inserter for FS-540/SD
PI-507 OR
- Job separator for FS-540/SD
JS-602 OR
- Z-fold unit for FS-540/SD
ZU-609

LEGEND

- Mandatory option
- Option
- This option can only be installed with the respective option above it



Konica Minolta Business Solutions U.S.A., Inc.
2025 A3 Line of the Year Award

WINNER!


2025 A3 LINE OF THE YEAR AWARD

The annual Line of the Year Award is Keypoint Intelligence's most prestigious award.

Models are recognized for:

- Impressive productivity
- Faster-than-average job streams/first print-out times
- Suitability for modern working

FINISHING FUNCTIONALITIES

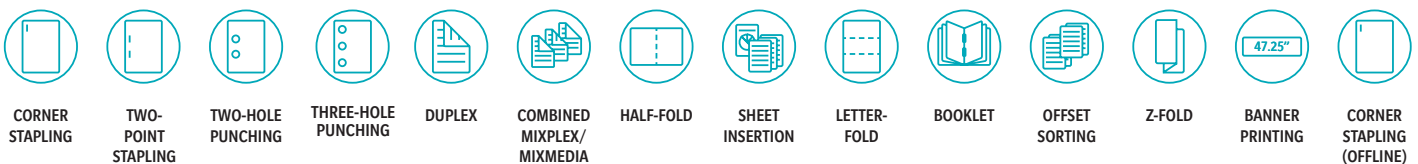

CORNER
STAPLING

TWO-
POINT
STAPLING

TWO-HOLE
PUNCHING

THREE-HOLE
PUNCHING

DUPLEX

COMBINED
MIXPLEX/
MIXMEDIA

HALF-FOLD

SHEET
INSERTION

LETTER-
FOLD

BOOKLET

OFFSET
SORTING

Z-FOLD

BANNER
PRINTING

CORNER
STAPLING
(OFFLINE)

TECHNICAL SPECIFICATIONS: 751i


SYSTEM SPECIFICATIONS

System speed letter	Up to 75 ppm
System speed 11" x 17"	Up to 37 ppm
Auto duplex speed letter	Up to 75 ppm
1st page out time letter	2.8 sec.
Warm-up time	Approx. 17 sec.
Imaging technology	Laser
Toner technology	Simitri® HD polymerized toner
Panel size/resolution	10.1" / 1024 x 600
System memory	8 GB (standard/max)
Solid state drive	256 GB SSD (standard) / 1 TB SSD (optional)
Interface	10/100/1,000-Base-T Ethernet; USB 2.0; Wi-Fi 802.11 b/g/n/ac (optional)
Network protocols	TCP/IP (IPv4 / IPv6); SMB; LPD; IPP; SNMP; HTTP(S); Bonjour
Automatic document feeder	Up to 300 originals; 5.5" X 8.5"; 11" x 17"; 35-210 g/m ² ; Dual scan ADF
ADF double feed detection	Standard
Printable paper size	3.5" x 5.5" - 12" x 18"; custom paper sizes, banner paper max. 42.25" x 11.7"
Printable paper weight	52-300 g/m ²
Paper input capacity	3,650 sheets / 6,650 sheets (standard/max)
Paper tray input (standard)	1x 500; 3.5" x 5.5" - 11" x 17"; custom sizes; 52-256 g/m ² 1x 500; 5.5" x 8.5" - 12" x 18"; custom sizes; 52-256 g/m ² 1x 1,500; 5.5" x 8.5" - 8.5" x 11"; 52-256 g/m ² 1x 1,000; 5.5" x 8.5" - 8.5" x 11"; 52-256 g/m ²
Manual bypass (standard)	150 sheets; 3.5" x 5.5" - 12" x 18"; custom sizes; banner; 60-300 g/m ²
Large capacity tray (optional)	1x 3,000; 8.5" x 11"; 52-256 g/m ² 1x 2,500; 8.5" x 11" - 12" x 18"; custom sizes; 52-256 g/m ²
Finishing modes (optional)	Offset; Group; Sort; Staple; Staple (offline); Punch; Half-fold; Letter-fold; Booklet; Post insertion; Z-fold
Automatic duplexing	3.5" x 5.5" - 12" x 18"; 52-256 g/m ²
Output capacity	Up to 200 sheets / up to 3,300 sheets (standard/max)
Stapling	Max. 100 sheets or 98 sheets + 2 cover sheets (up to 300 g/m ²)
Stapling output capacity	Max. 200 sets
Letter fold	Max. 3 sheets
Letter fold capacity	Max. 50 sets; unlimited (without tray)
Booklet	Max. 20 sheets or 19 sheets + 1 cover sheet (up to 300 g/m ²)
Booklet output capacity	Max. 35 booklets; unlimited (without tray)
Duty cycle (monthly)	Max. 300,000 pages
Power consumption	110-120V/ 50/60 Hz; Less than 2.10 kW
System dimension (W x D x H)	24.2" x 27.1" x 47.5" (without options)
System weight	Approx. 353 lbs. (without options)

SYSTEM FEATURES

Security	ISO 15408 HCD-PP Common Criteria IP filtering and port blocking, SSL3 and TLS1.2/1.3 network communication, IPsec support, IEEE 802.1x support, User authentication, Authentication log, Secure print, Kerberos, Overwrite all data function, SSD self-encryption (AES 256)/ Storage Lock Password, Confidential fax, Print user data encryption Optional: Antivirus scanning (Bitdefender®), Copy protection (Copy Guard, Password Copy)
Accounting	Up to 1,000 user accounts, Active Directory support (user name + password + e-mail + smb folder); User function access definition; Authentication by mobile device (Android); ID card authentication (ID card reader); Authentication by mobile device (iOS)
Software	Net Care Device Manager, Data Administrator, Web Connection, Log Management Utility

- All specifications refer to 8.5" x 11" paper of 80 g/m² weight.
- The support and availability of the listed specifications and functionalities vary depending on operating systems, applications and network protocols as well as network and system configurations.
- Some of the product illustrations contain optional accessories.
- Specifications and accessories are based on the information available at the time of printing and are subject to change without notice.
- Konica Minolta does not warrant that any specifications mentioned will be error-free.

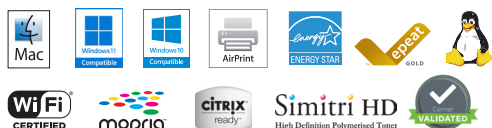

PRINTER SPECIFICATIONS (STANDARD)

Print resolution	1,800 (equivalent) x 600 dpi; 1200 x 1200 dpi
Print speed letter	Up to 75 ppm
Page description language	PCL 6 (XL3.0); PCL 5c; PostScript 3 (CPSI 3016); XPS
Operating systems	SERVER: Windows Server 2016; Windows Server 2019; Windows Server 2022; CLIENT: Windows 10; Windows 10/11x64 Edition; Windows Server 2016 / Server 2019 / Server 2022; macOS 11 or later; Red Hat Enterprise Linux; Google Chrome OS
Printer fonts	80 PCL Latin; 137 PostScript 3 Emulation Latin
Mobile printing	AirPrint (iOS); Mopria (Android); Konica Minolta Print Service (Android); Konica Minolta Mobile Print (iOS/Android) Optional: Wi-Fi Direct

SCANNER SPECIFICATIONS

Scan speed	Up to 140/140 ipm in simplex (mono/color) Up to 280/280 ipm in duplex (mono/color)
Scan resolution	Up to 600 x 600 dpi
Scan modes	Scan-to-eMail (Scan-to-Me); Scan-to-SMB (Scan-to-Home); Scan-to-FTP; Scan-to-Box; Scan-to-USB; Scan-to-WebDAV; Scan-to-DPWS; Scan-to-URL; TWAIN scan
File formats	JPEG; TIFF; PDF; Compact PDF; Encrypted PDF; XPS; Compact XPS; PPTX; PDF/A 1a and 1b Optional: Searchable PDF; Searchable DOCX/PPTX/XLSX

COPIER SPECIFICATIONS

Copy resolution	600 x 600 dpi
Gradation	256 gradations
Multicopy	1-9,999
Original format	Max. 11" x 17"
Magnification	25-400% in 0.1% steps, Auto zoom

FAX SPECIFICATIONS

Fax standard	Super G3 (optional)
Fax transmission	Analog; i-Fax; Color i-Fax; IP-Fax
Fax resolution	Up to 600 x 600 dpi
Fax compression	MH, MR, MMR, JBIG
Fax modem	Up to 33.6 Kbps
Fax destinations	2,000 single + 100 groups

USER BOX SPECIFICATIONS

Storable documents	Up to 3,000 documents or 10,000 pages
Type of user boxes	Public, Personal (with password or authentication), Group (with authentication)
Type of system boxes	Secure print; Encrypted PDF print; Fax receipt; Fax polling